



# Toshiba Satellite L455D-S5976 Optical Drive Replacement

This guide will show you how to replace the optical drive in your device.

Written By: NateJohnson



## INTRODUCTION

The optical drive is what reads a CD or DVD when placed in the drive. To replace it, follow the steps outlined in this guide.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Unlock the right tab by sliding it to the right with your finger.

## Step 2



- Hold the left tab to the left using your left hand.




### Step 3



- Remove the battery by placing your finger in the middle groove and lifting up.

### Step 4 — Optical Drive

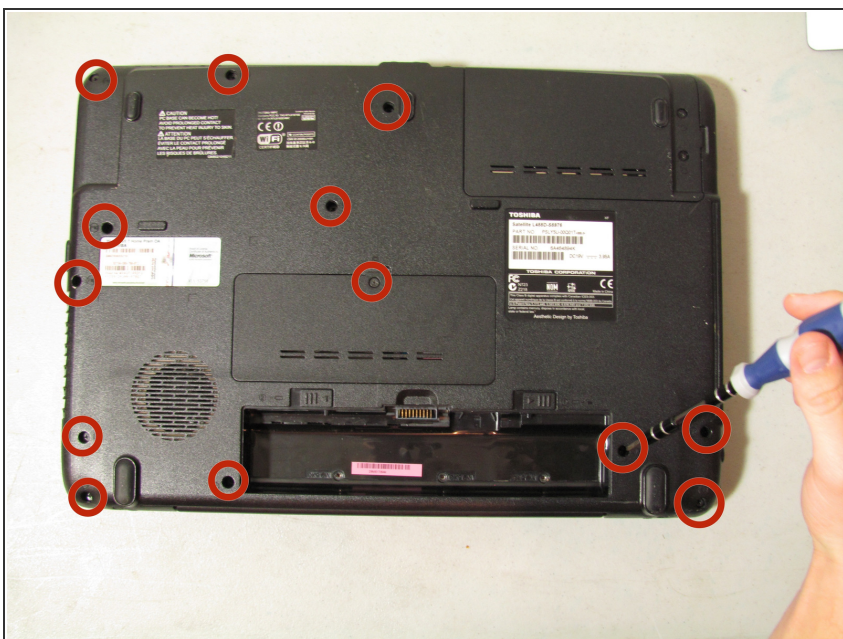

- Remove the 13 Phillips #1 10mm screws from the backside of your computer using a Phillips #1 screwdriver.



## Step 5




- Remove the two Phillips #1 6mm screws from the backside of your computer using a Phillips #1 screwdriver.

## Step 6



- Remove the three 3mm screws from beneath the battery with a Phillips #1 screwdriver.

## Step 7

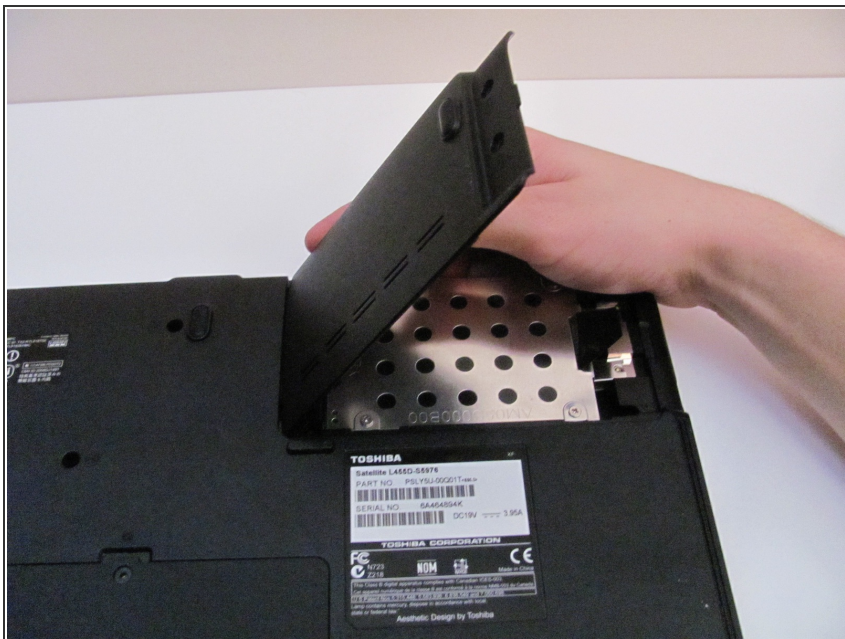

- Lift up the corner panel and remove it with your hand.



## Step 8



- Unscrew the four Phillips #1 3mm using a Phillips #1 screwdriver.
- Unscrew the four 10mm screws around hard drive using a Phillips #1 screwdriver.



## Step 9

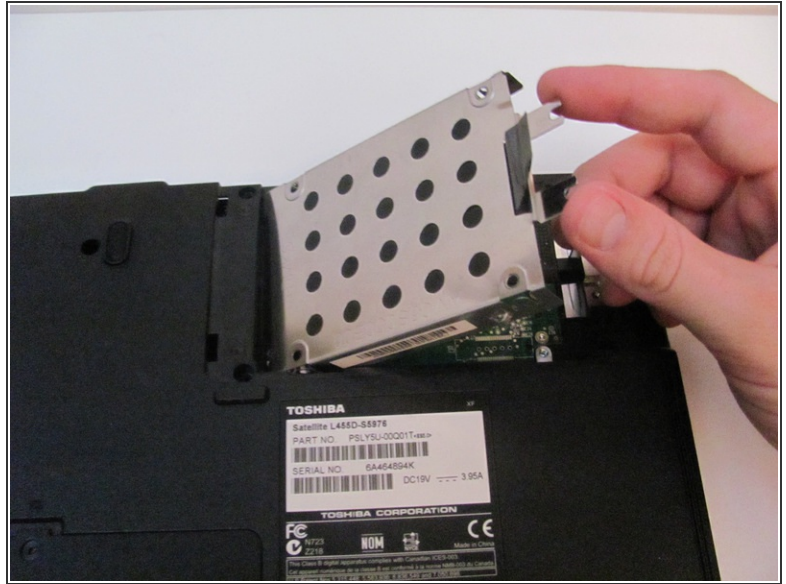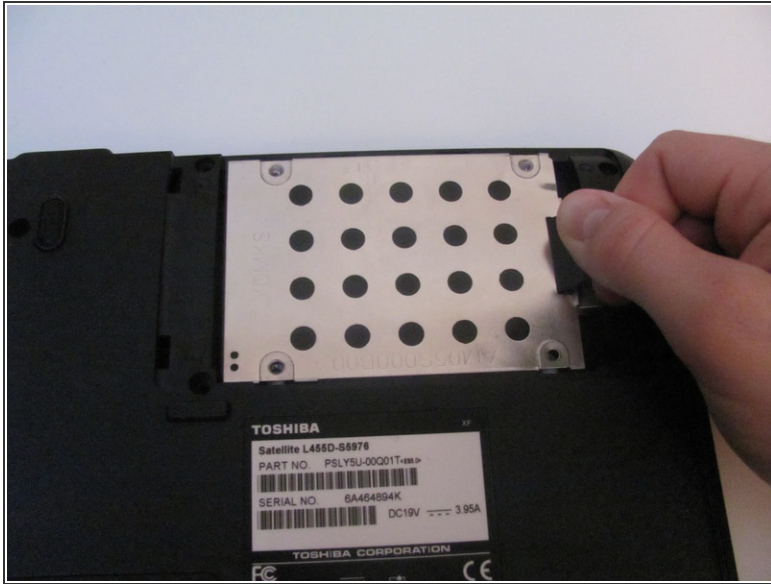

- To remove the hard drive case, first pull the black tab to the right.
- Then pull the black tab up to remove the case.

## Step 10



- Remove the plastic strip above the "F" keys using the spudger by placing the small end of the spudger under the strip and lifting up.



## Step 11




- Remove the two Phillips #1 3mm screws underneath the plastic strip using a Phillips #1 screwdriver.

## Step 12





- Lift the keyboard up and remove it with your hands.

## Step 13

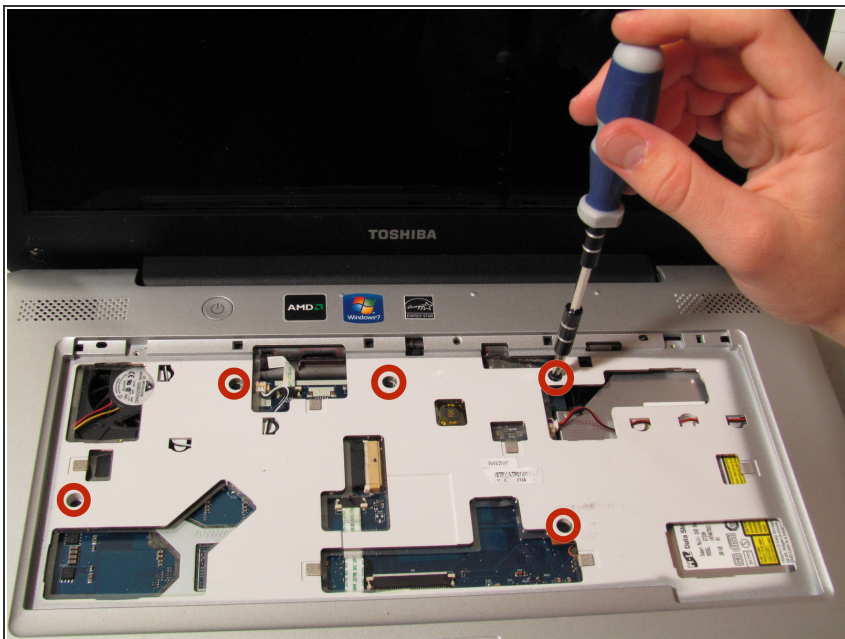

- Remove the five Phillips #1 10mm screws underneath the keyboard using a Phillips #1 screwdriver.


## Step 14

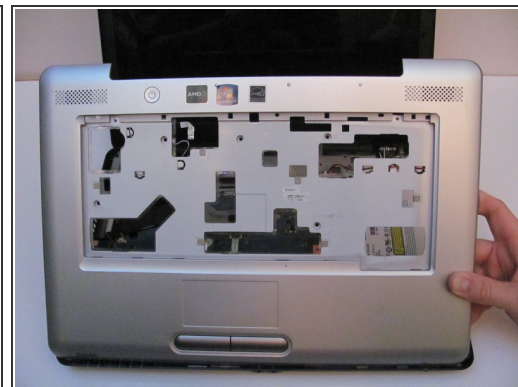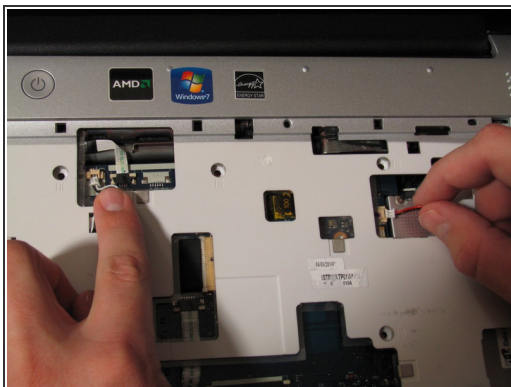

- Lift up the plastic panel and carefully disconnect the red and white ports.
- Remove the panel




## Step 15

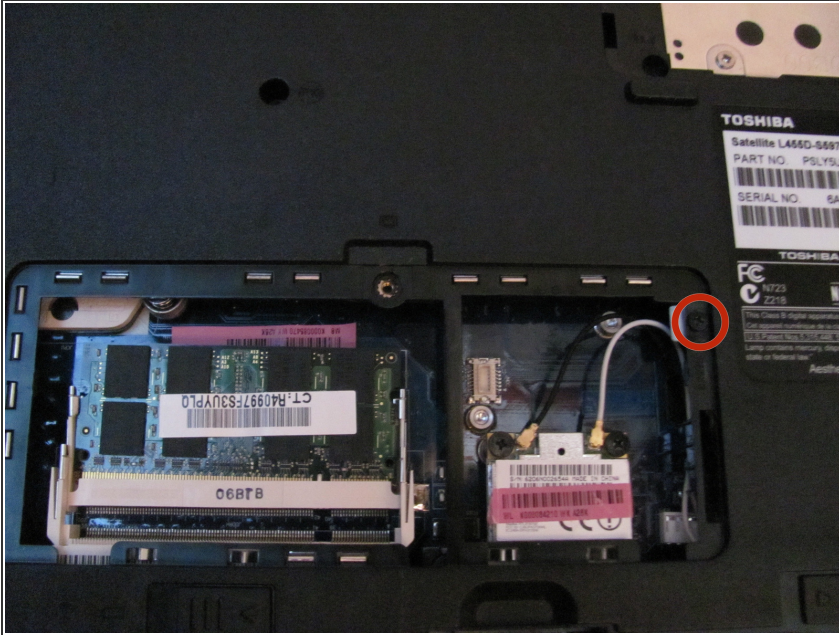

- Turn the laptop over so the bottom is facing up
- Then remove the 3mm screw with a #1 screwdriver, located underneath the panel containing the wifi card and RAM

## Step 16

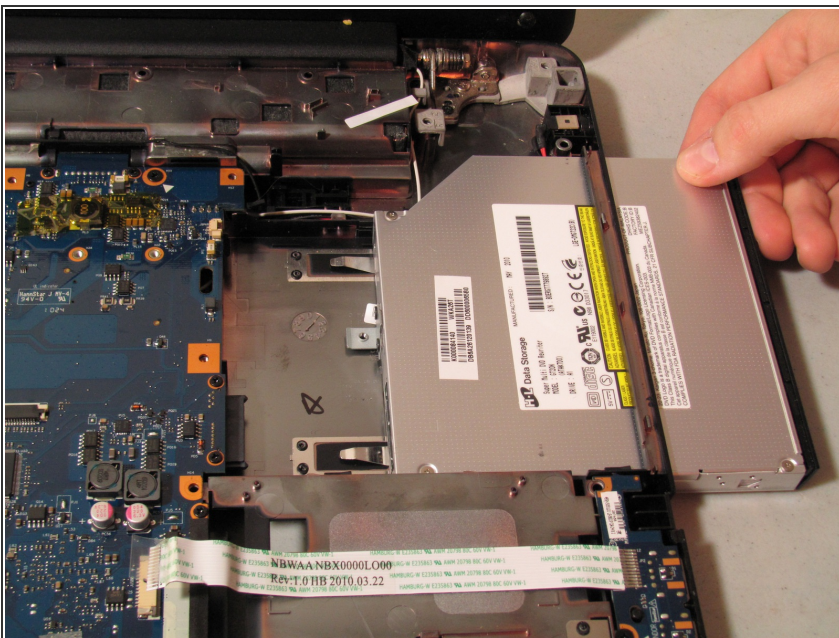

- Turn the laptop back over so the motherboard is facing up
- Now slide the optical drive out of the computer by gently pulling it to the right

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 04:25:24 AM.